






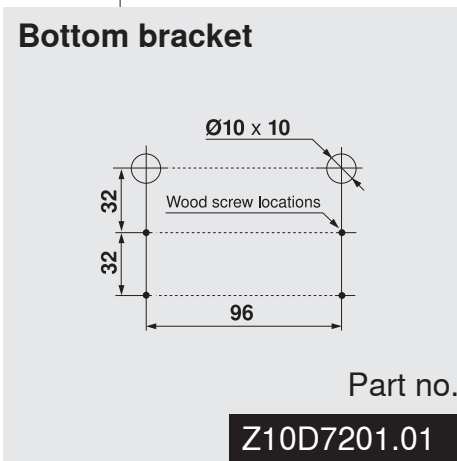
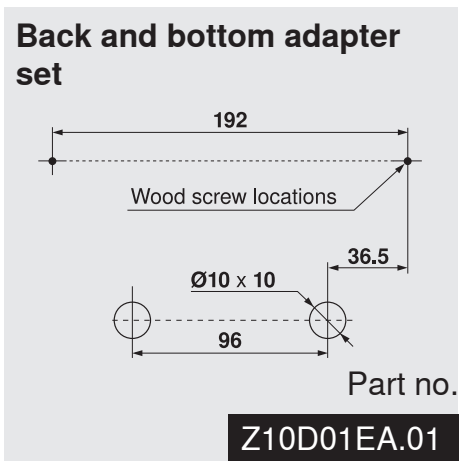
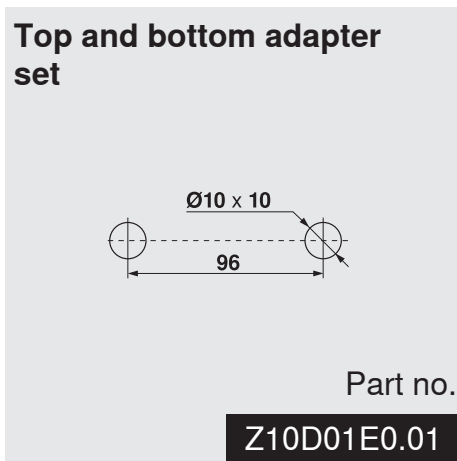




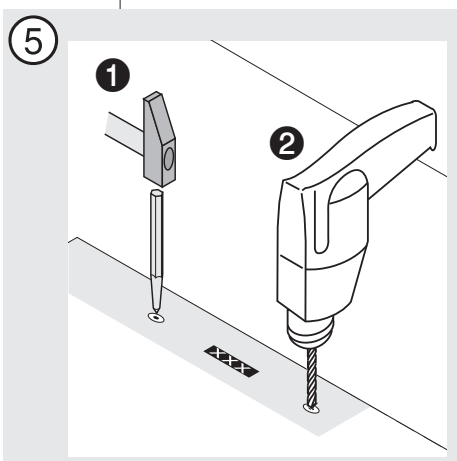
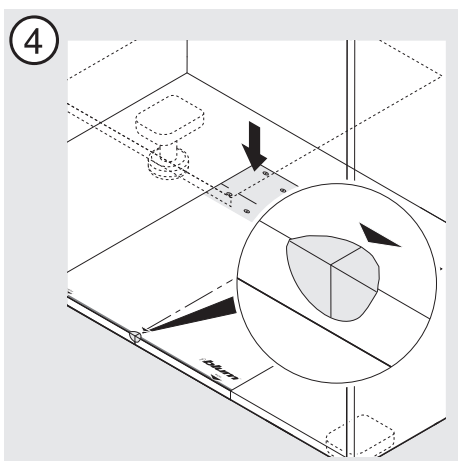
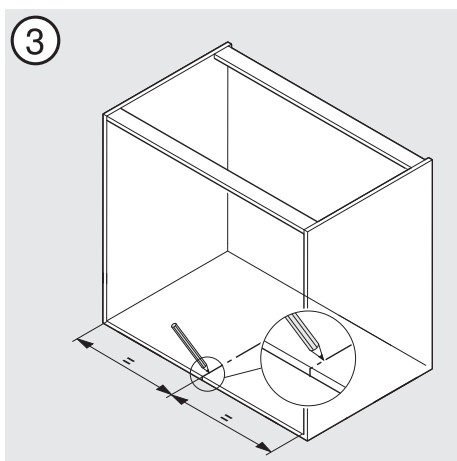
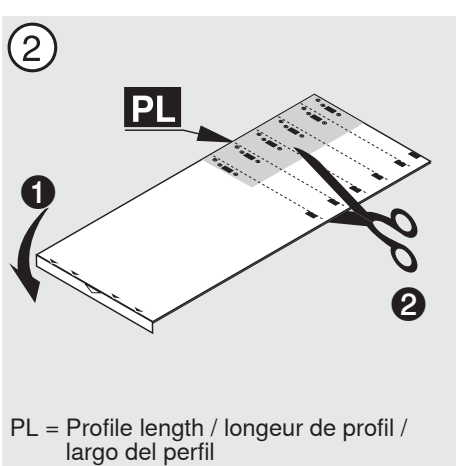
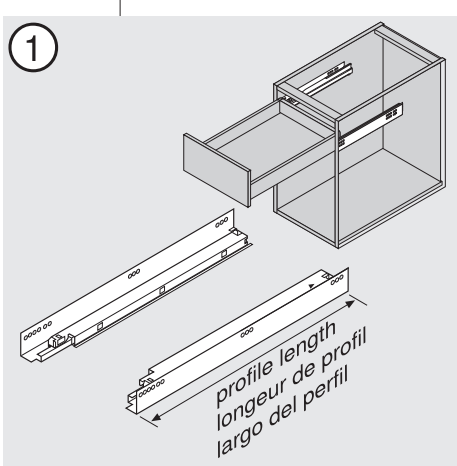


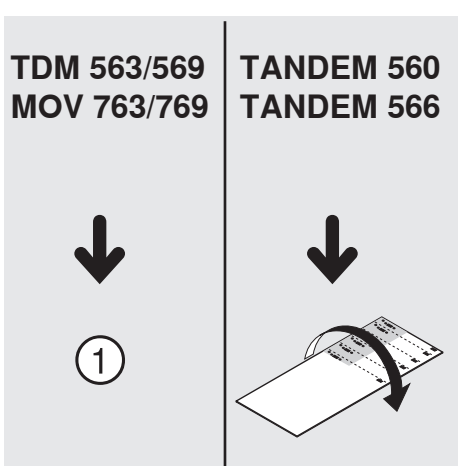


TANDEM 560
TANDEM 566

M
E
D
I
A
T
E

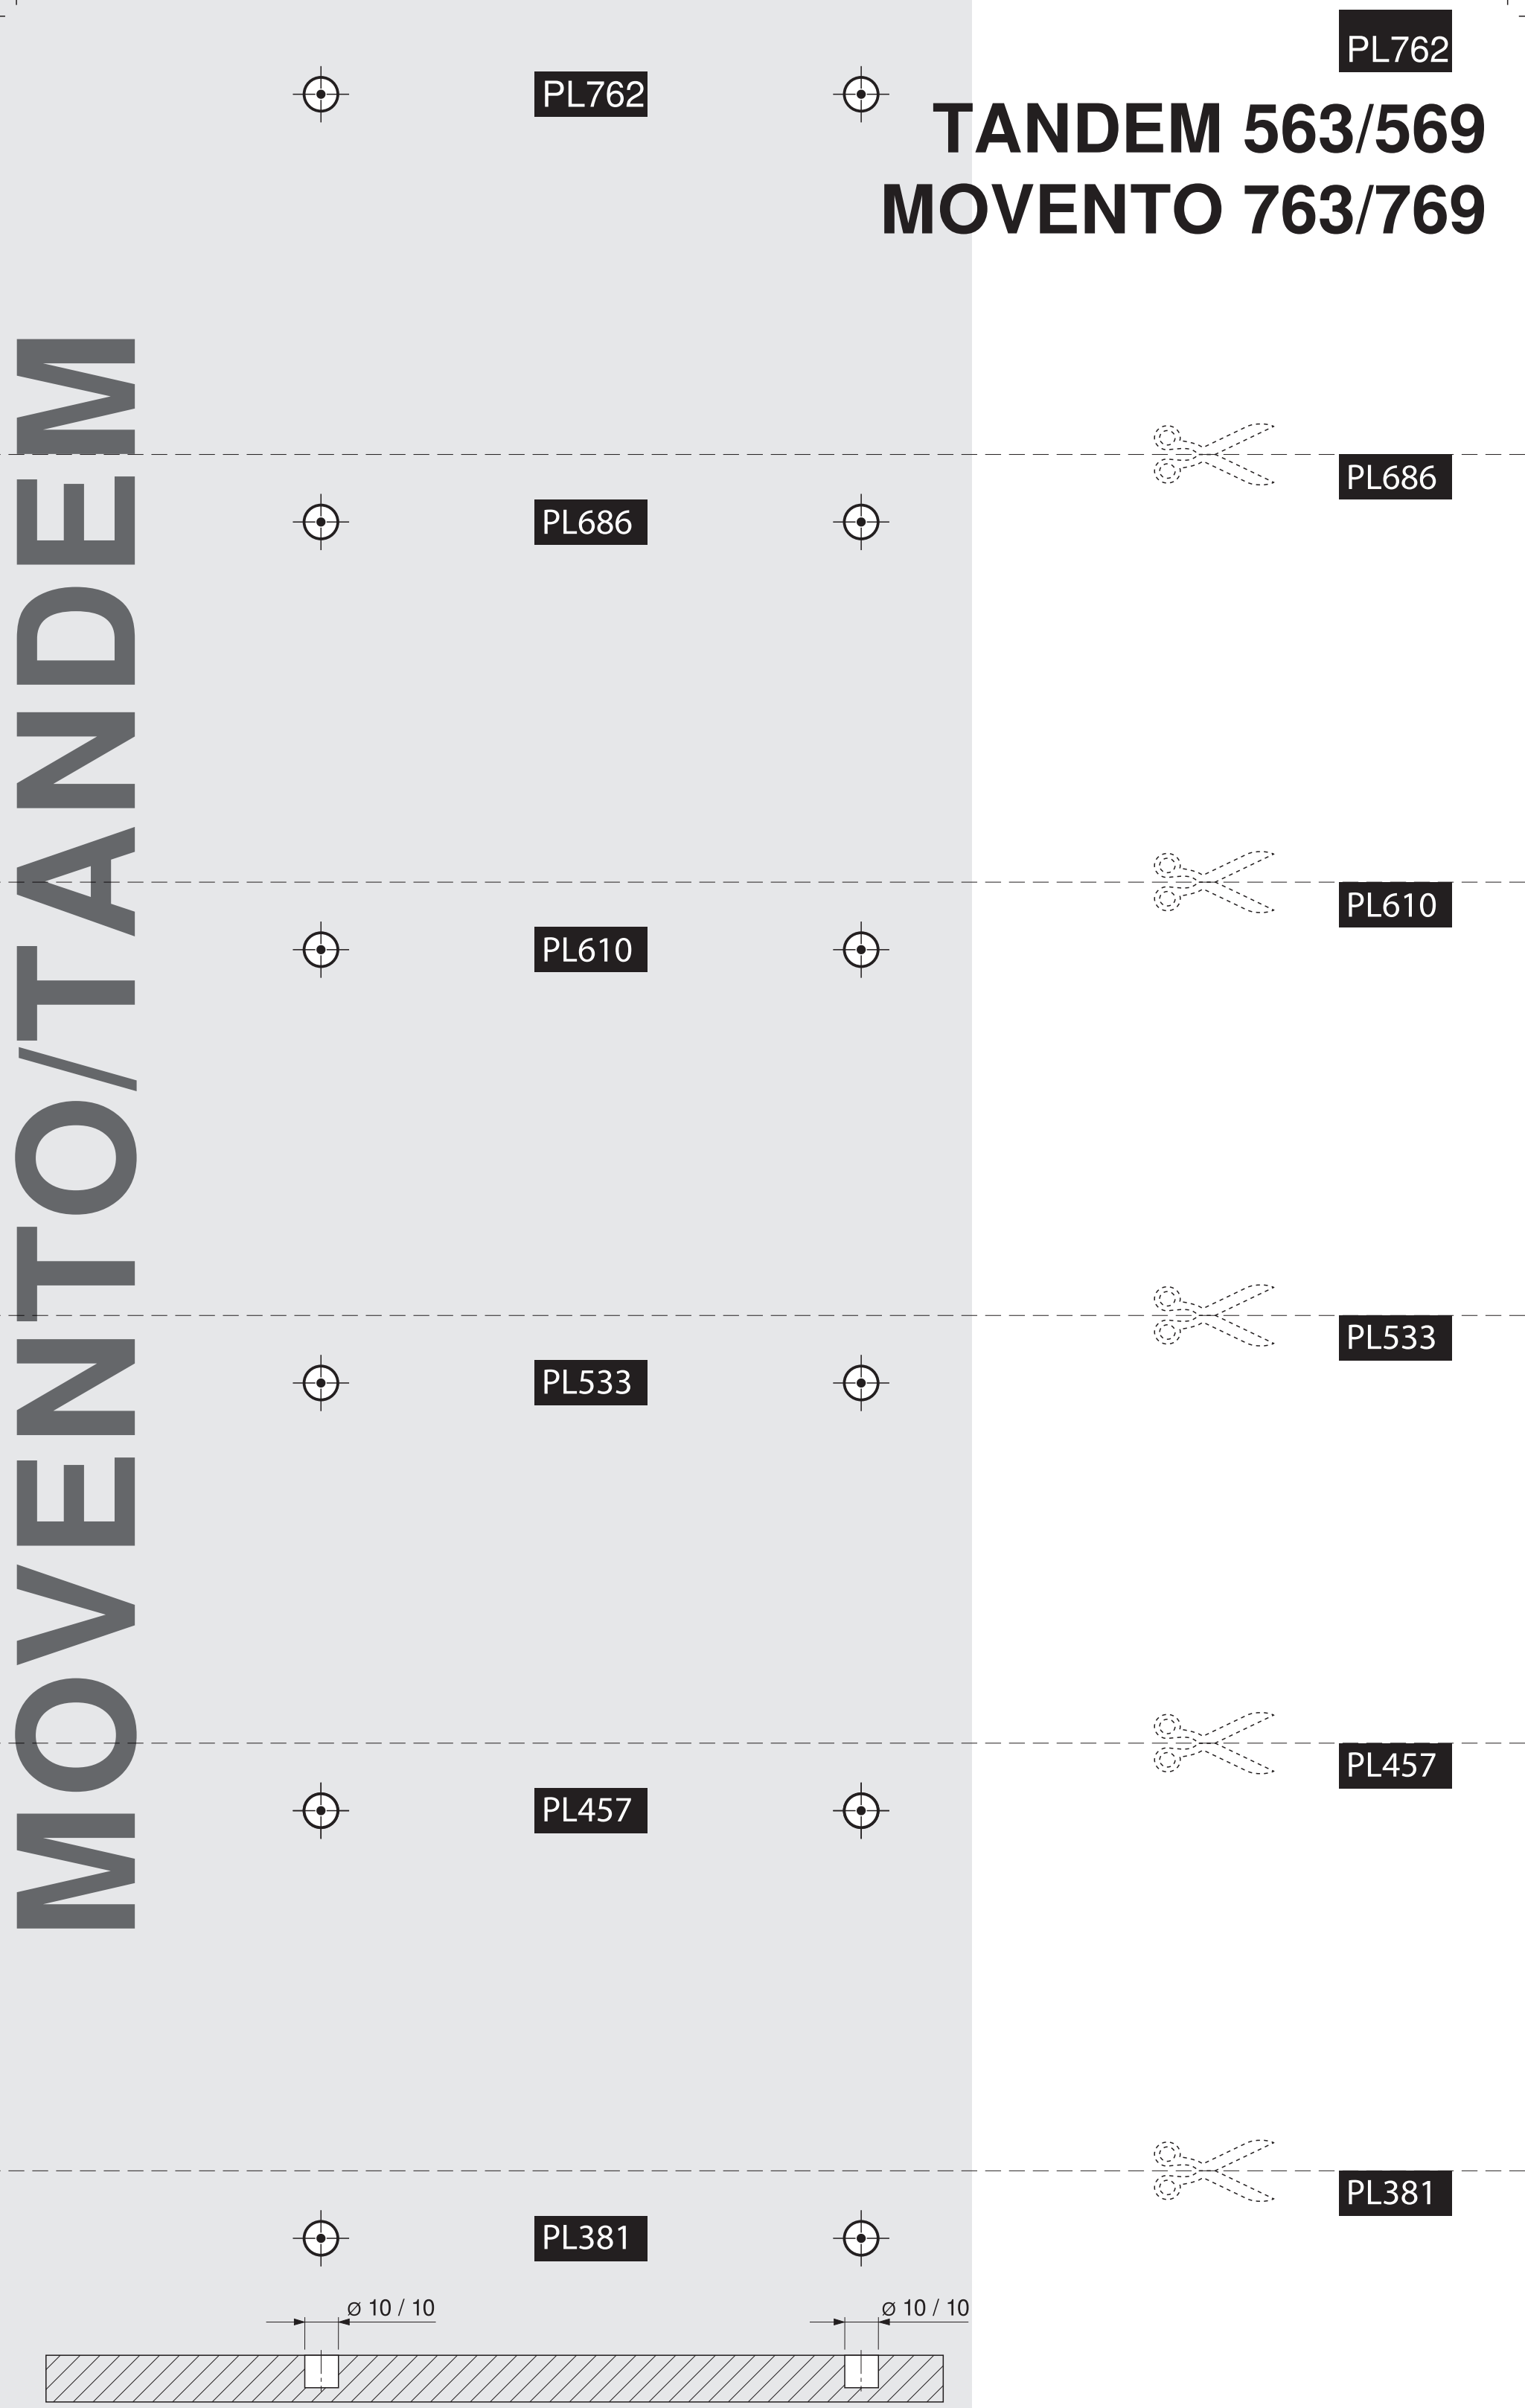


PL650



PL650



PL600



PL600



PL550



PL550



PL500



PL500




PL450



PL450




PL400



PL400

TANDEM 560
TANDEM 566

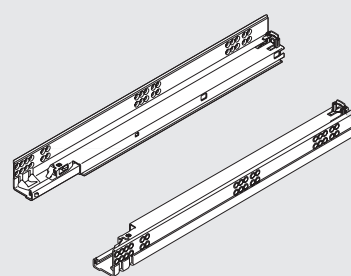


TANDEM 560
TANDEM 566




1


TDM 563/569
MOV 763/769

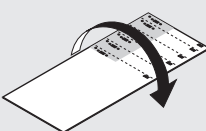

1

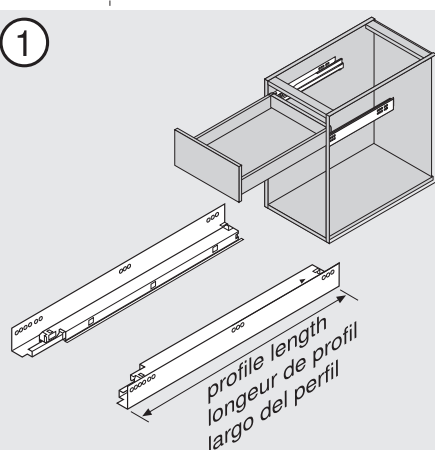


2

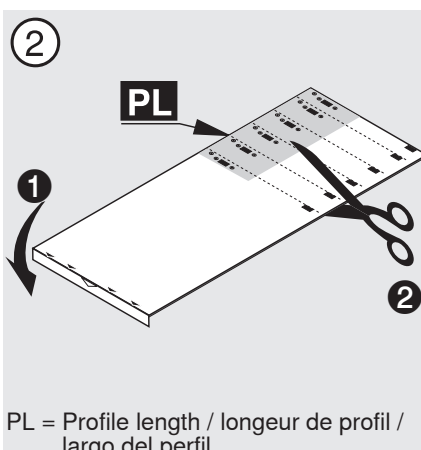


PL = Profile length / longueur de profil /
largo del perfil


3

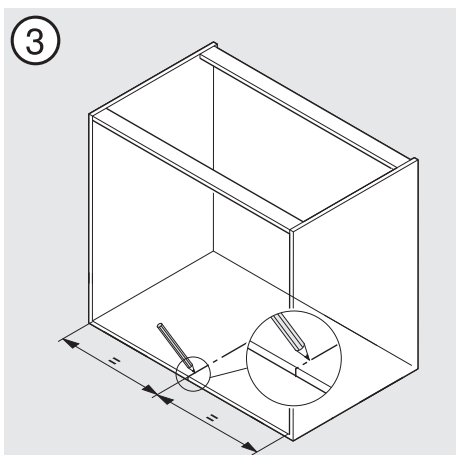

4

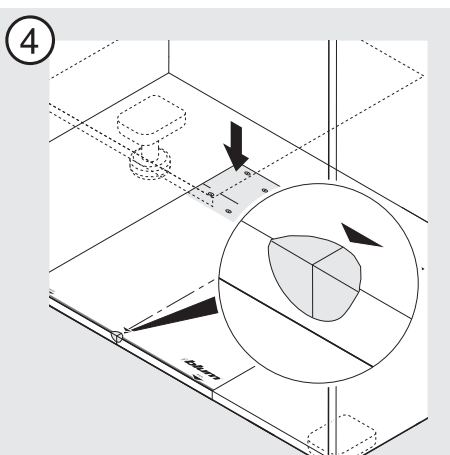

5

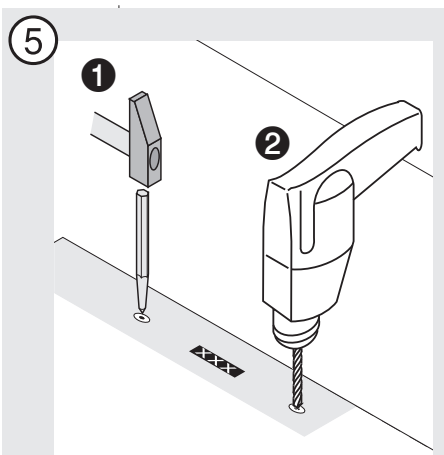

fold

blum