

Hinge Identification Guide




Which hinge do you have? Discover with Blum.

Welcome to our Blum hinge identification guide. This booklet is designed to help you accurately identify the Blum hinges you have. Each hinge is accompanied by its specific name, key identification pointers and part numbers, with a part number guide at the end of each section for reference.




Contents

- 4 CLIP Hinge: Main Components
- 6 Attachments
- 7 CLIP top BLUMOTION
- 10 CLIP top
- 14 CLIP
- 15 Part Number Identification: CLIP top BLUMOTION,
CLIP top and CLIP Hinges
- 16 CLIP Mounting Plates
- 17 Part Number Identification: CLIP Mounting Plates
- 20 COMPACT Hinge: Main Components
- 22 Attachments
- 23 COMPACT CLIP
- 25 COMPACT BLUMOTION
- 27 COMPACT
- 29 Part Number Identification: COMPACT BLUMOTION
and COMPACT Hinges
- 30 Part Number Identification: COMPACT CLIP

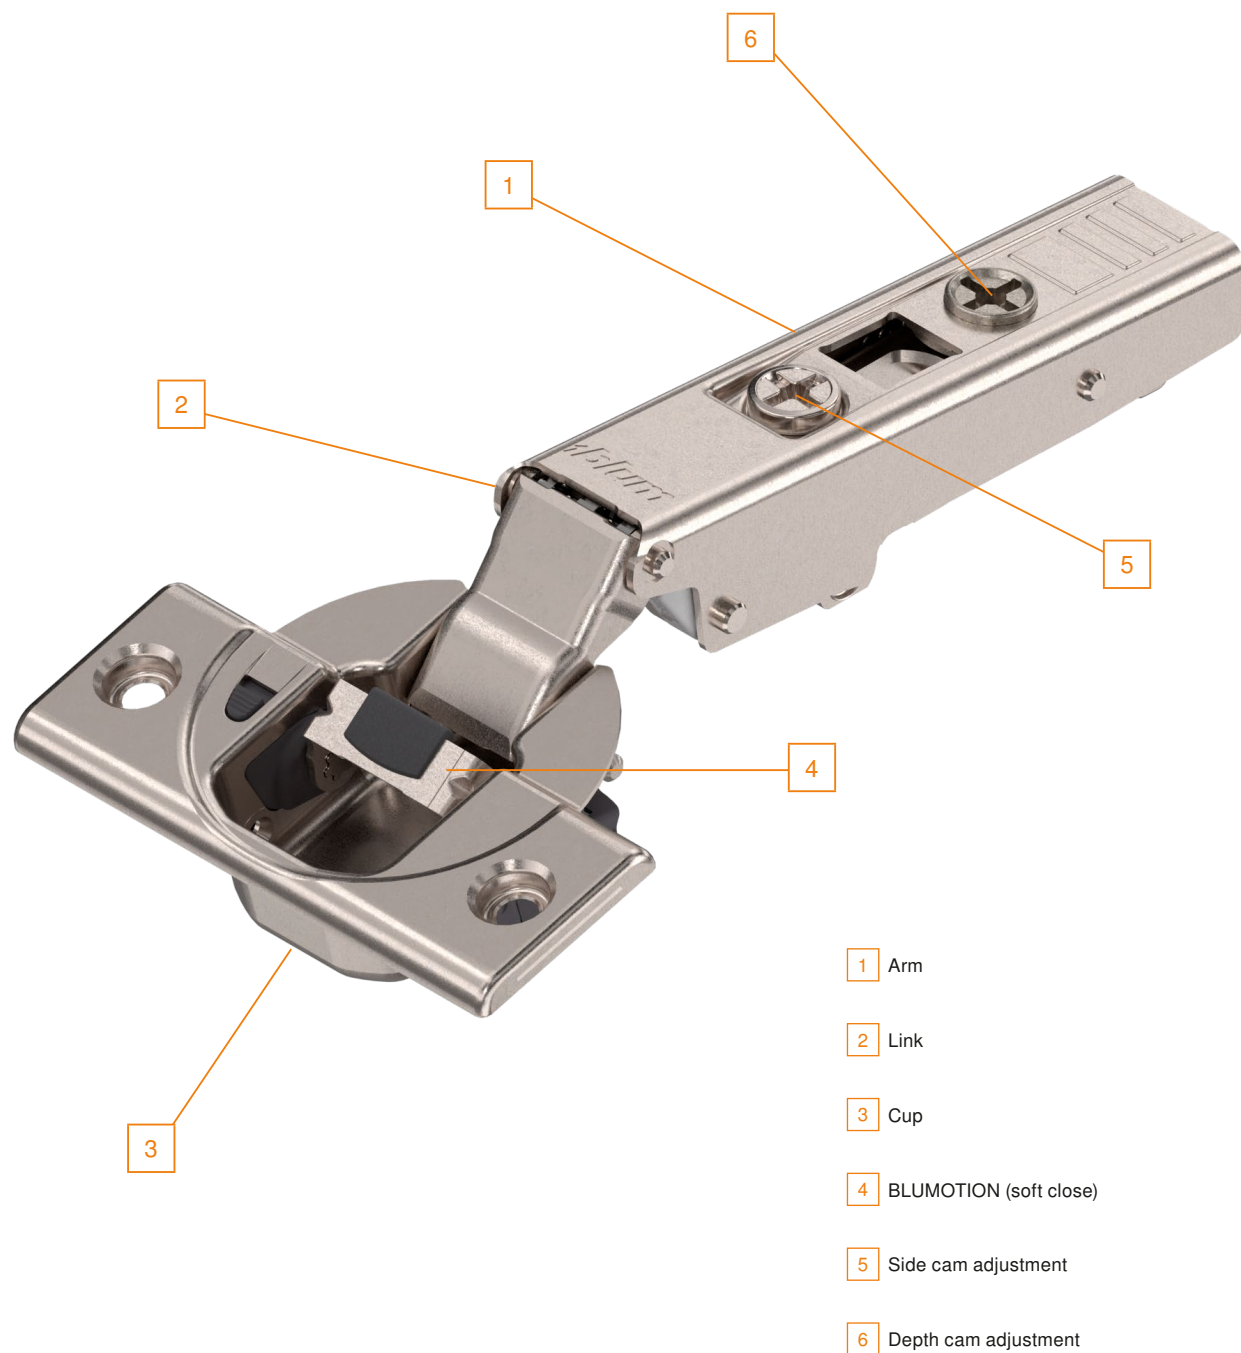

NOTE: All hinges shown are straight-arm hinges. The same characteristics apply to cranked hinge arms—with the exception of the shape/size of the arm and different reference numbers.

Straight arm**Half crank****Full crank**

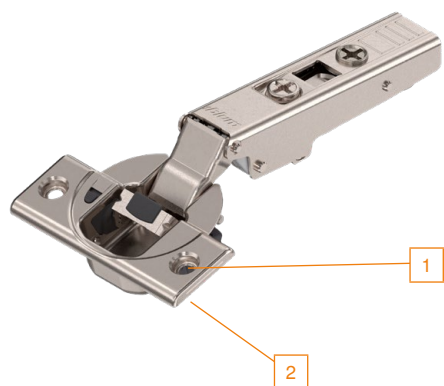


Screw-on

1 No screws

2 No dowels

Part no.

71B3550

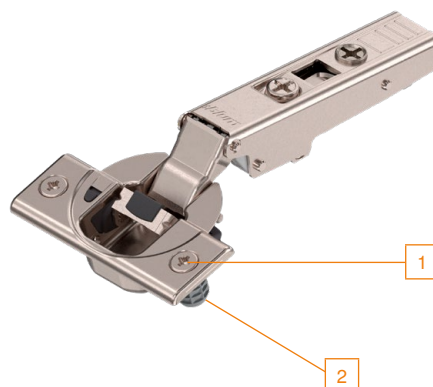


Press-in

1 Dowel screws

2 8 mm dowels

Part no.

71B3580

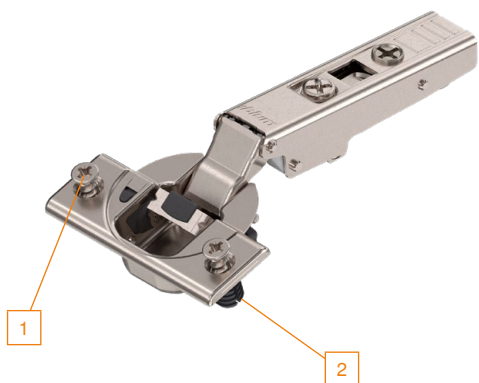


EXPANDO

1 EXPANDO screws

2 8 mm EXPANDO dowels

Part no.

71B358E

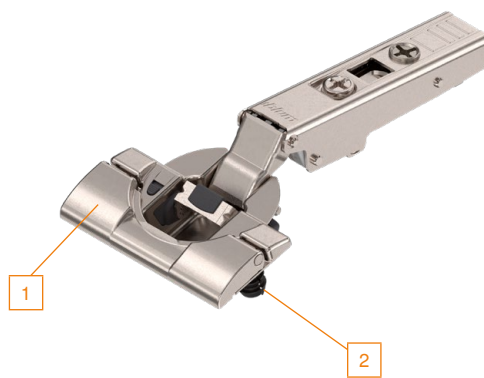


INSERTA

1 Die cast clamp

2 8 mm INSERTA dowels

Part no.

71B3590

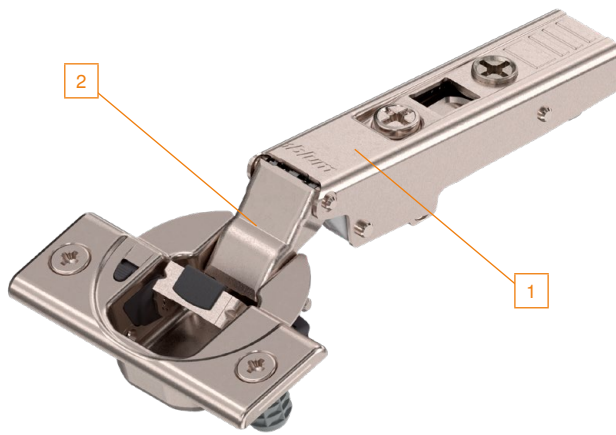
**CLIP top BLUMOTION 110°**

1 Straight arm

2 Indented link

Part no.

71B35X0

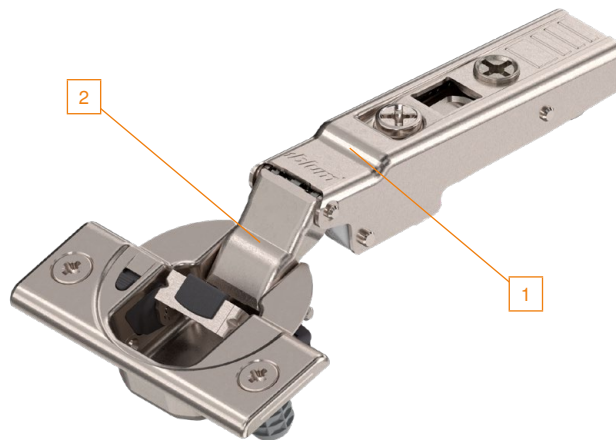
**CLIP top BLUMOTION 110°+**

1 Indented arm

2 Indented link

Part no.

73B35X0

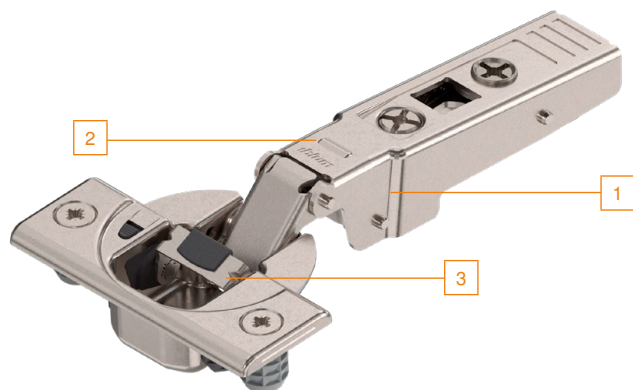


CLIP top BLUMOTION 95° Thick Door

- 1 Stepped arm
- 2 Raised line on arm
- 3 BLUMOTION (soft close)

Part no.

71B9580

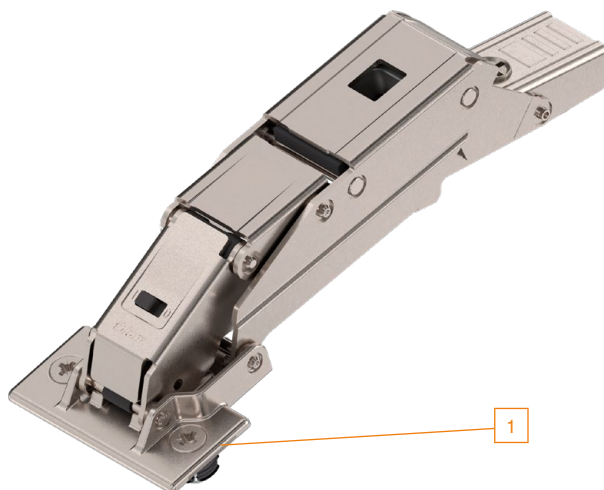


Thin Door Hinge

- 1 No hinge cup

Part no.

71B453T

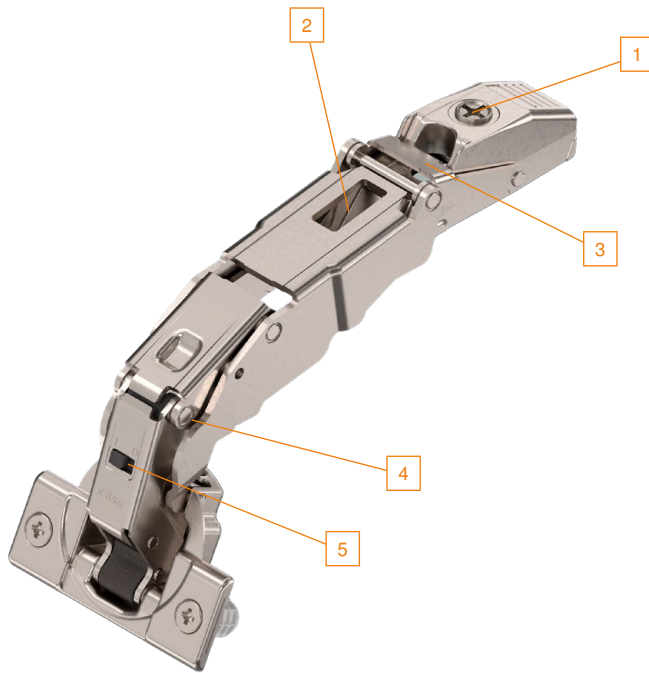


CLIP top BLUMOTION 155°

- 1** Depth cam adjustment
- 2** Rectangle cutout in arm (side cam adjustment)
- 3** Narrow hinge link
- 4** Full exposed rivet
- 5** BLUMOTION deactivation switch

Part no.

71B75X0

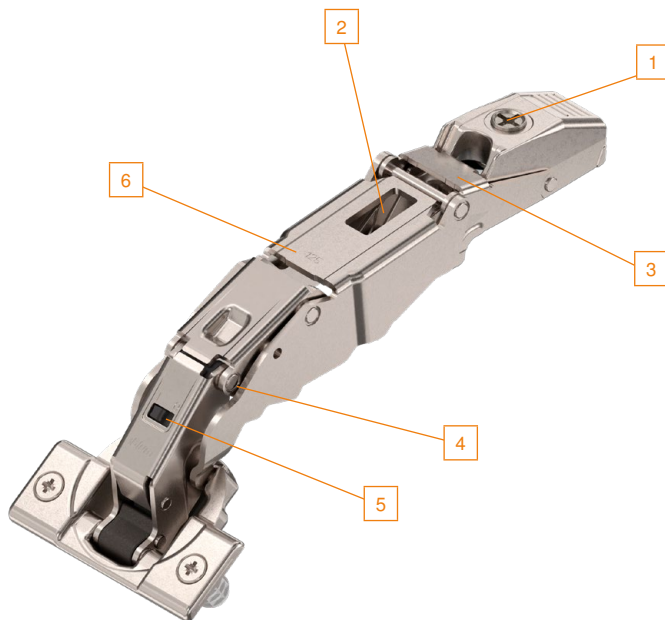


CLIP top BLUMOTION 125°

- 1** Depth cam adjustment
- 2** Rectangle cutout in arm (side cam adjustment)
- 3** Wide hinge link
- 4** Partial exposed rivet
- 5** BLUMOTION deactivation switch
- 6** 125° logo

Part no.

71B75X0D

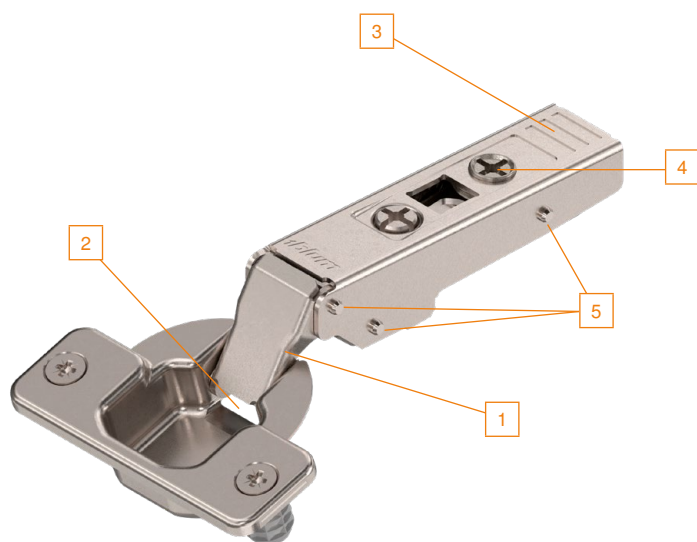


CLIP top 107°

- 1 Tapered link
- 2 Small opening in cup
- 3 Ribbed surface
- 4 "Spiral-tech" cam depth adjustment screw
- 5 Three rivets

Part no.

75T15X0

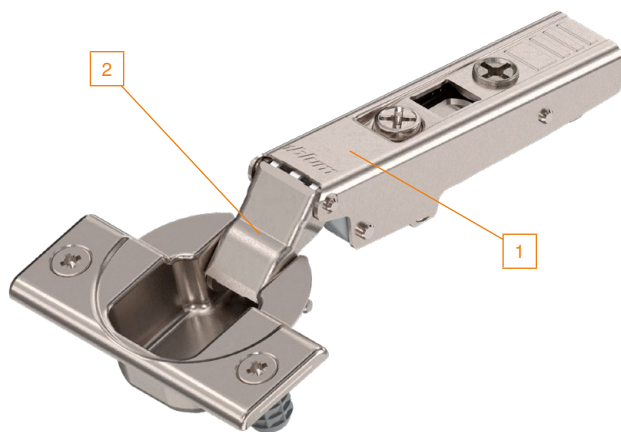


CLIP top 110°

- 1 Straight arm
- 2 Indented link

Part no.

71T35X0

CLIP top 110°+

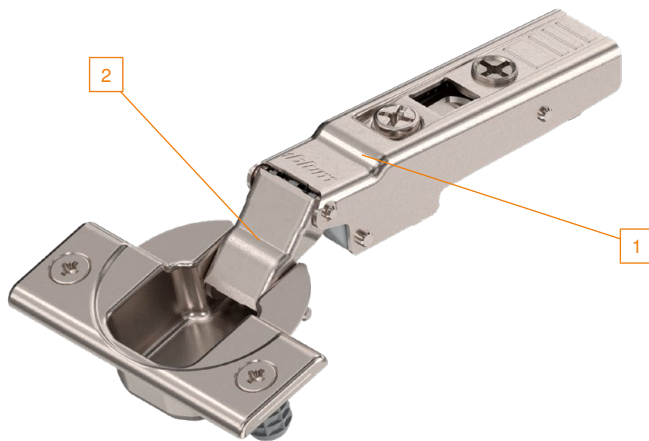


1 Indented arm

2 Indented link

Part no.

73T35X0

CLIP top 95° Thick Door

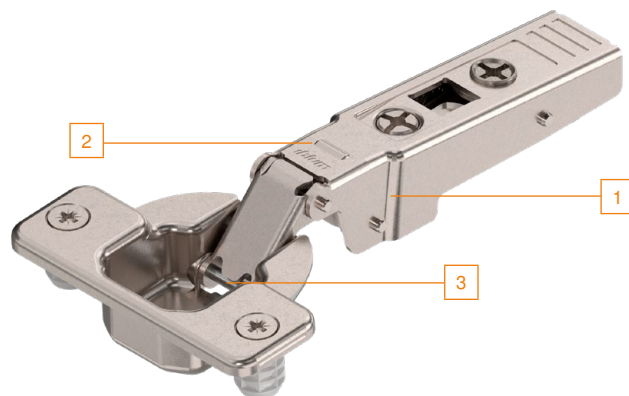


1 Stepped arm

2 Raised line on arm

3 Exposed link rivet

Part no.

71T95X0

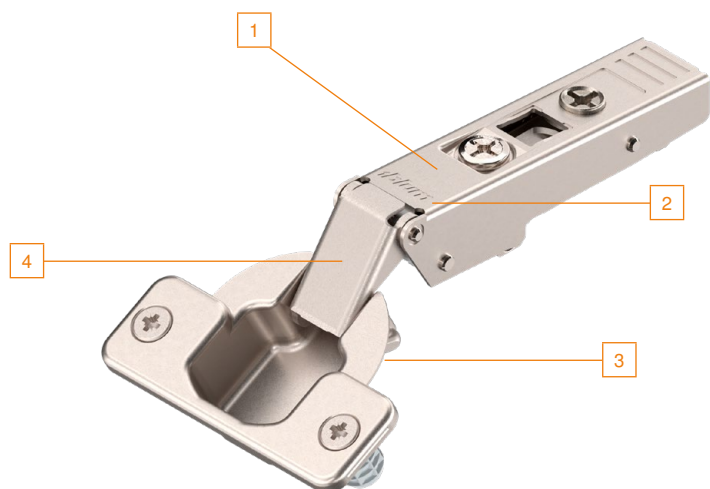


CLIP top 120°

- 1 Straight arm
- 2 "blum" logo
- 3 Rounded cup
- 4 Straight link

Part no.

71T55X0

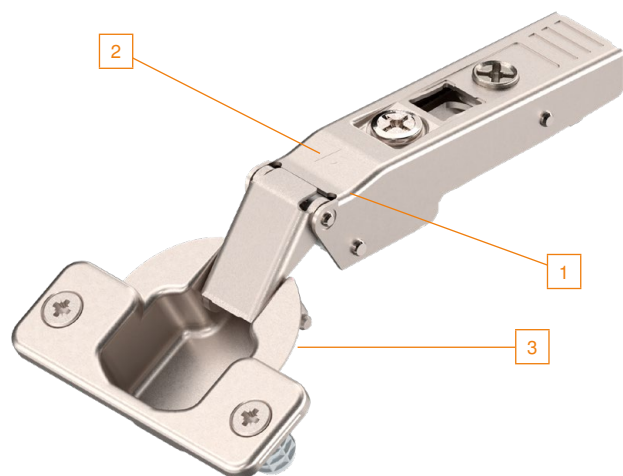


CLIP top 120°+

- 1 Indented arm
- 2 "b" logo
- 3 Rounded cup

Part no.


73T55X0

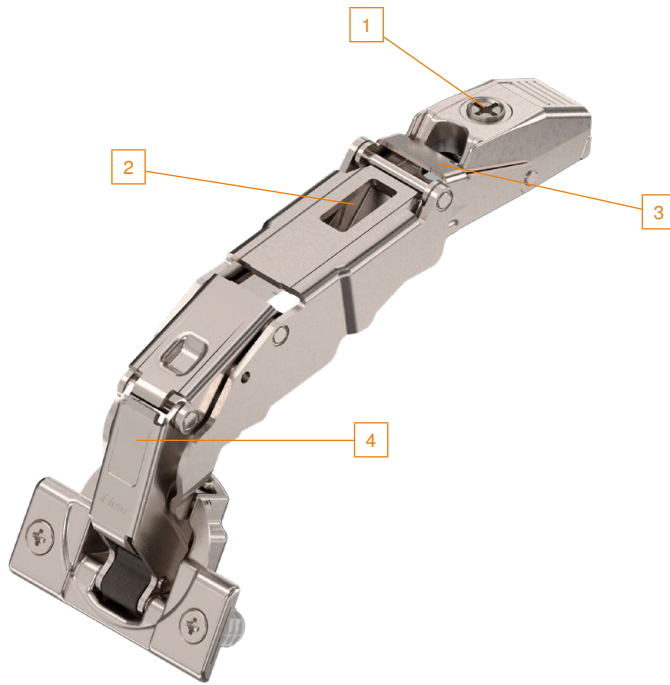

CLIP top 155°

- 1** Depth cam adjustment
- 2** Rectangle cutout in arm (side cam adjustment)
- 3** Narrow hinge link
- 4** No BLUMOTION deactivation switch

Part no.

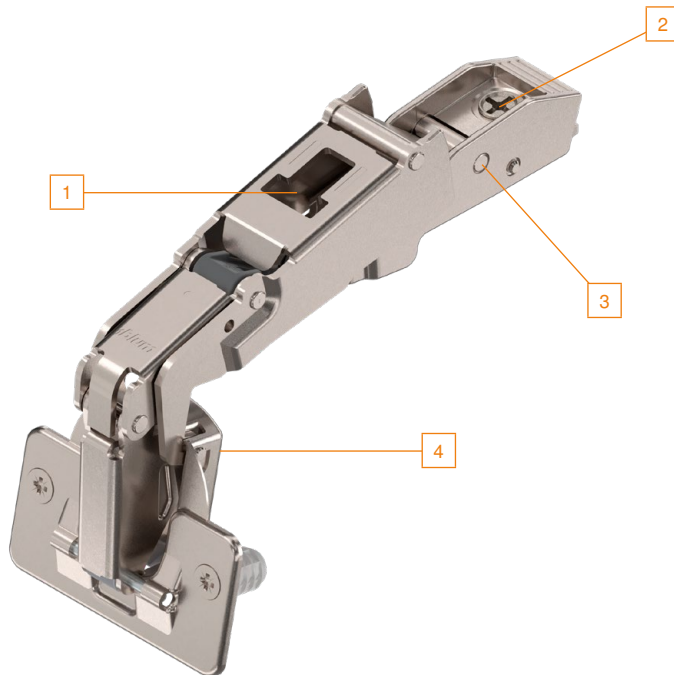
71T75X0

CLIP top 170°

- 1** "T" cutout in arm (side cam adjustment)
- 2** Adjustment cam screw recessed
- 3** Rear link inside
- 4** Square-shaped cup

Part no.

71T65X0

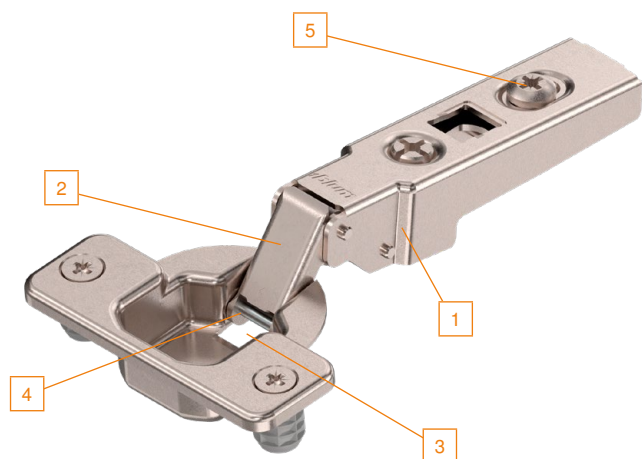


CLIP 100°

- 1 Stepped arm
- 2 Narrow/Straight link
- 3 Large opening in cup
- 4 Exposed link rivet
- 5 Sliding depth adjustment screw

Part no.

71M25X0

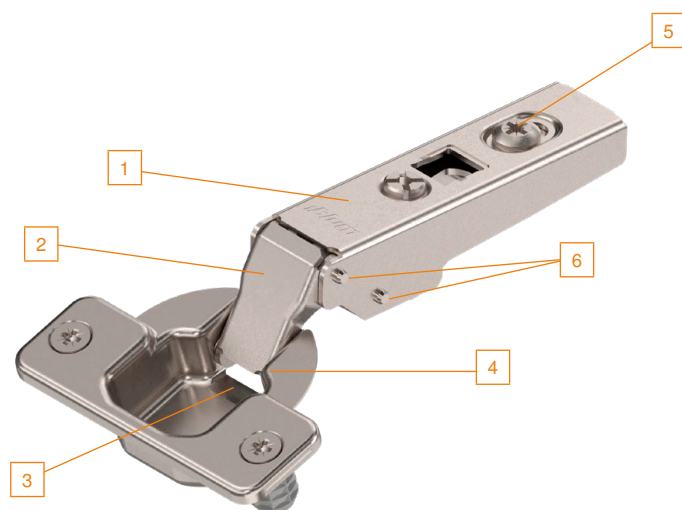


CLIP 107°


- 1 Straight arm
- 2 Tapered link
- 3 Small closed cup
- 4 Covered link rivet
- 5 Sliding depth adjustment screw
- 6 Two rivets

Part no.

75M15X0

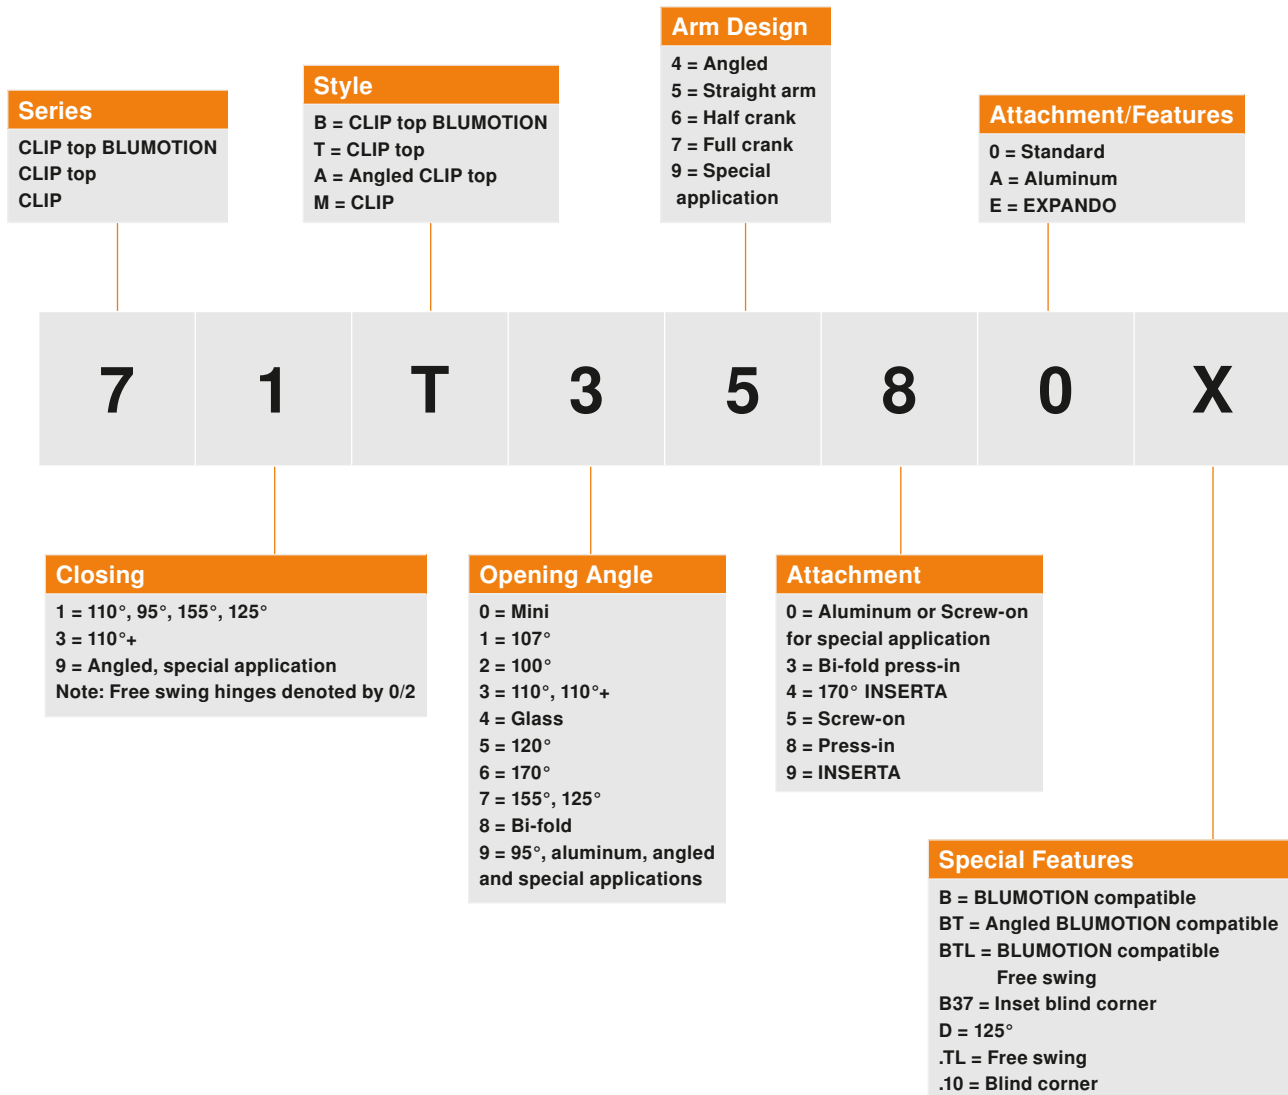

Wing mounting plate

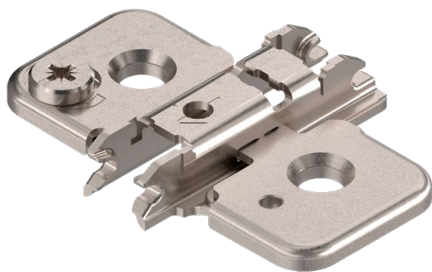


In-line mounting plate




Face frame adapter plate




Inset face frame adapter plate

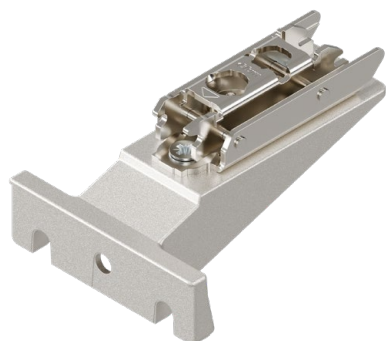

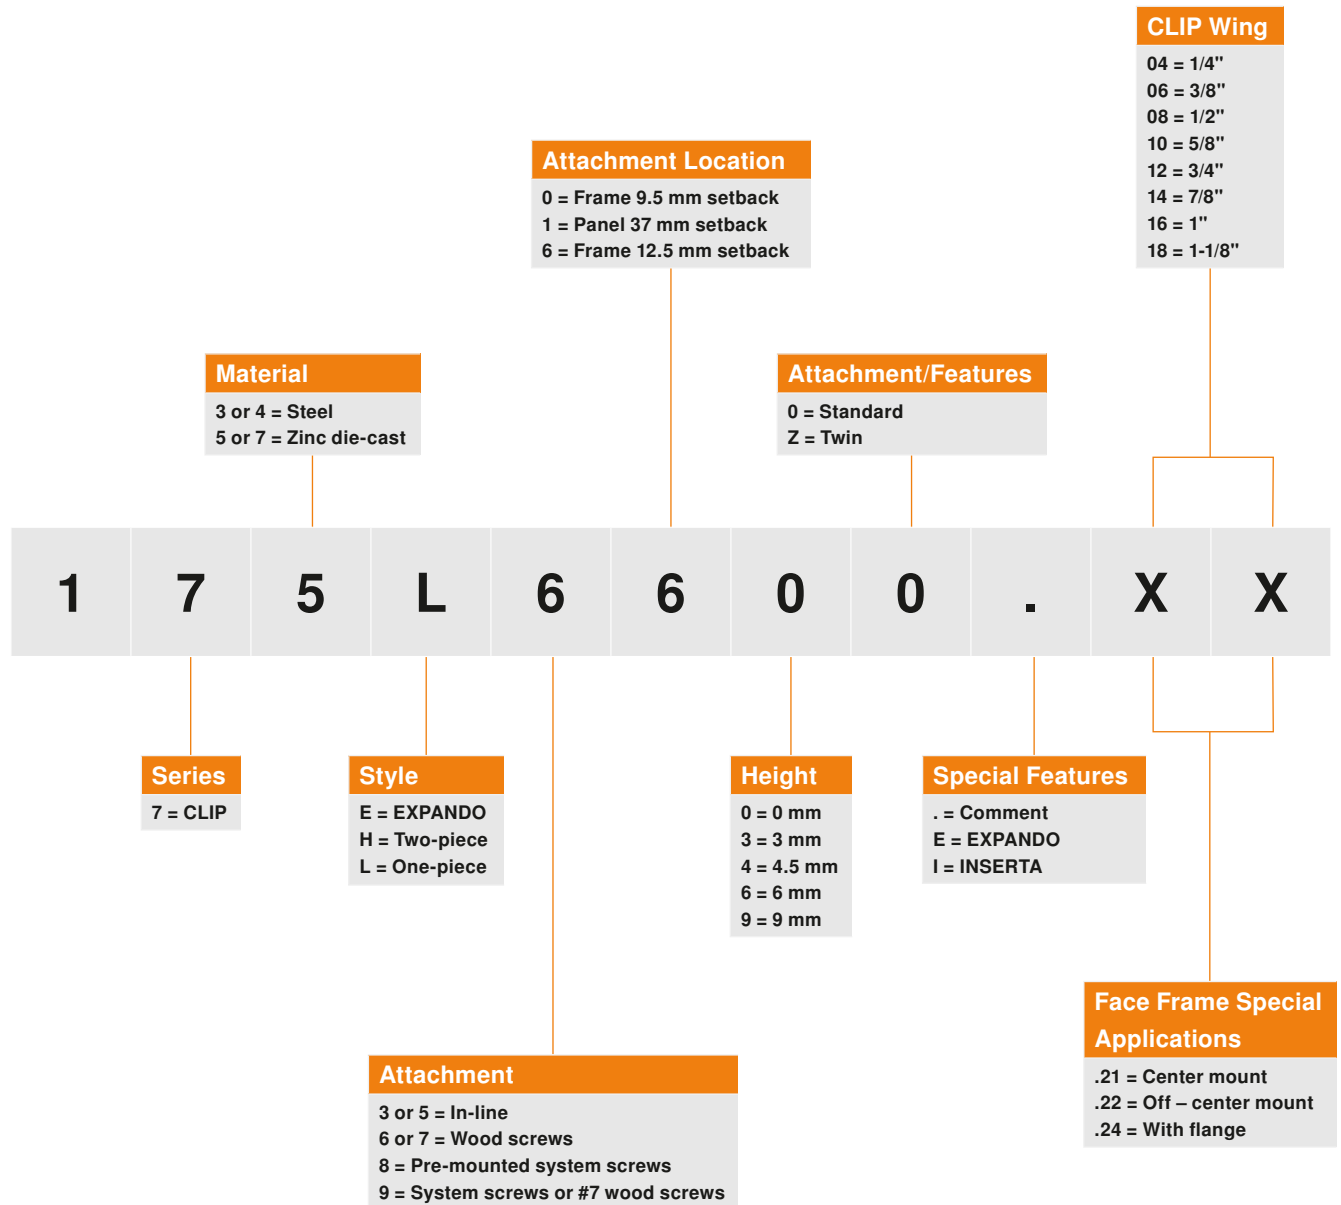






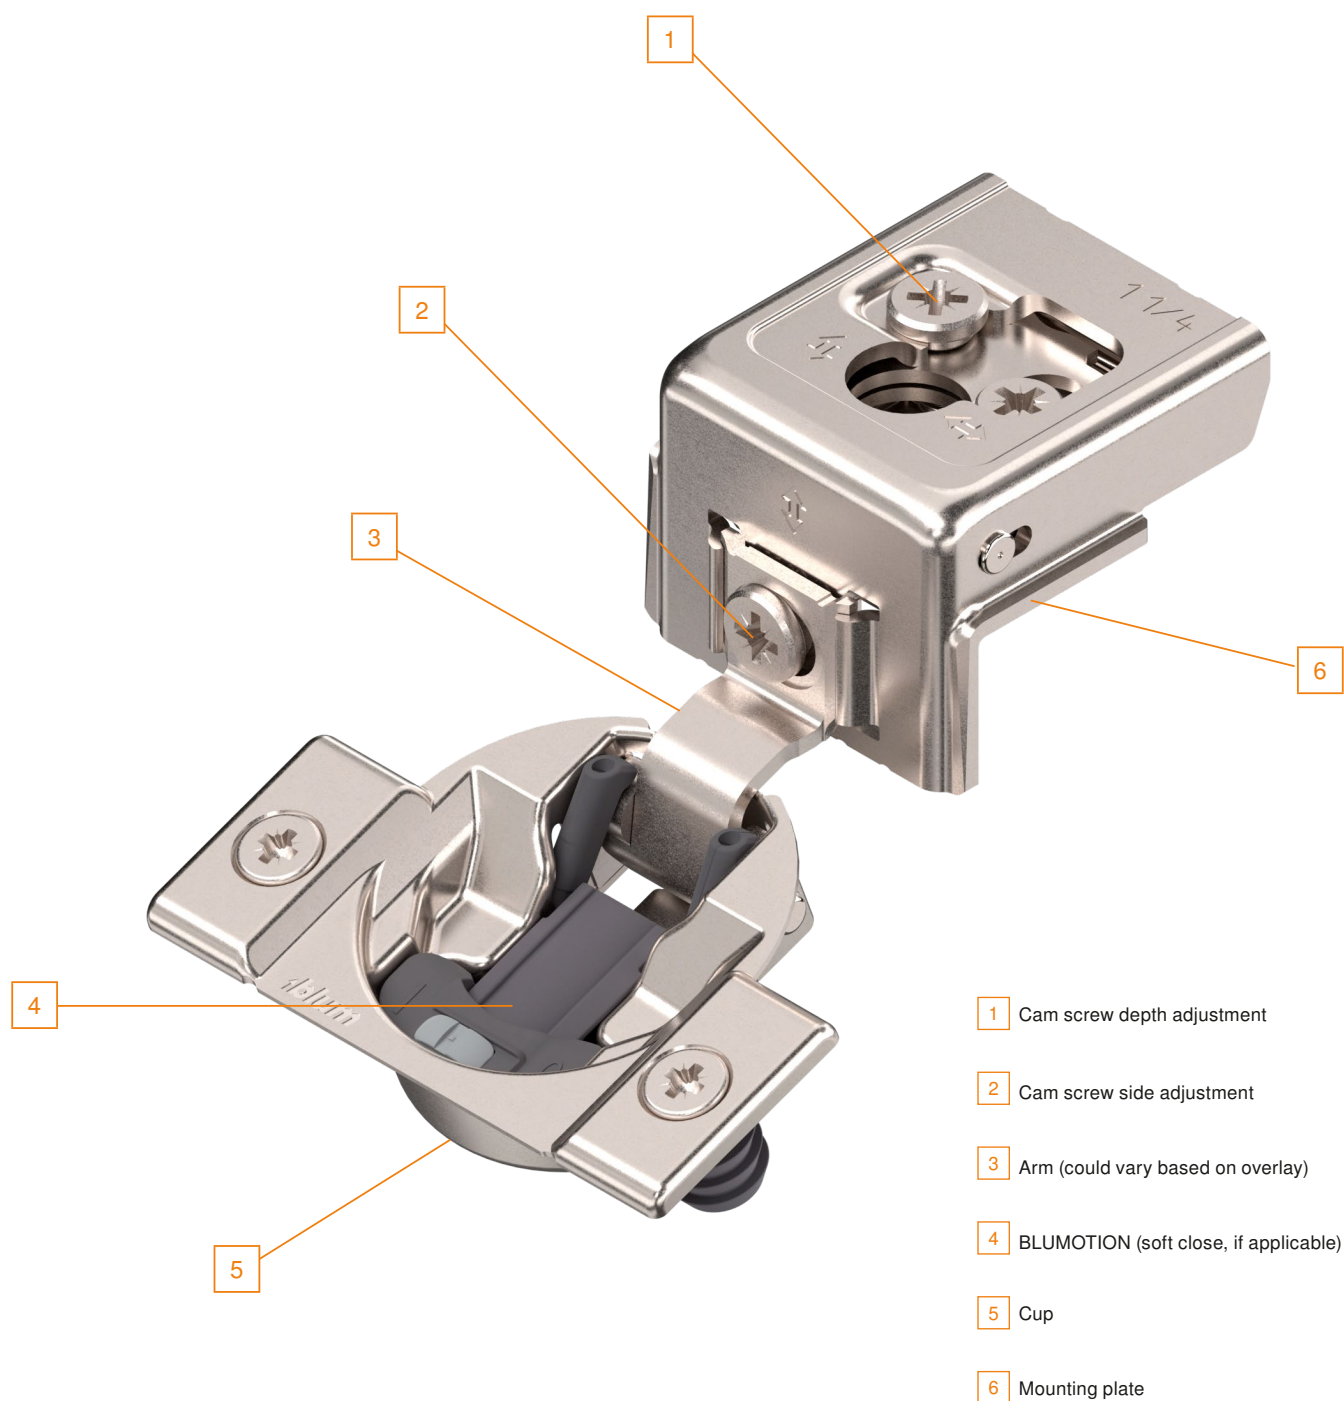


NOTE: The hinge shown is an example of a full overlay COMPACT hinge.

Cup Depth

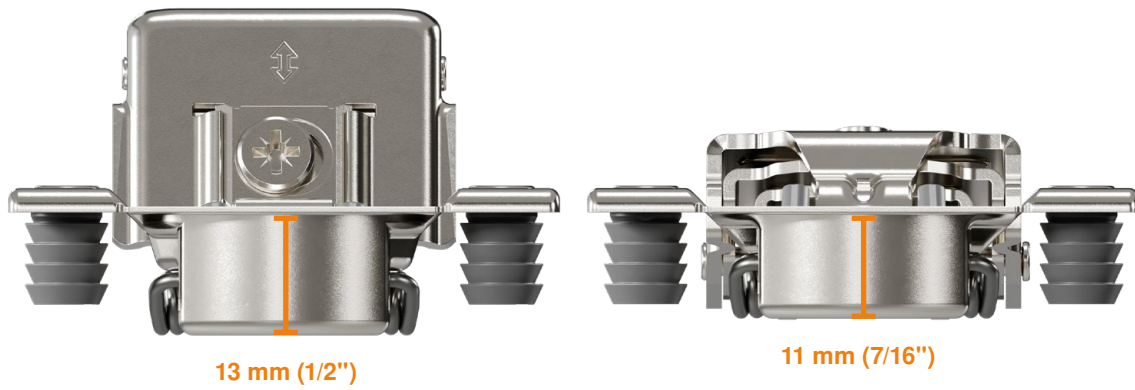

NOTE: For COMPACT hinges, you will need to measure the cup depth and reference the part number guide.

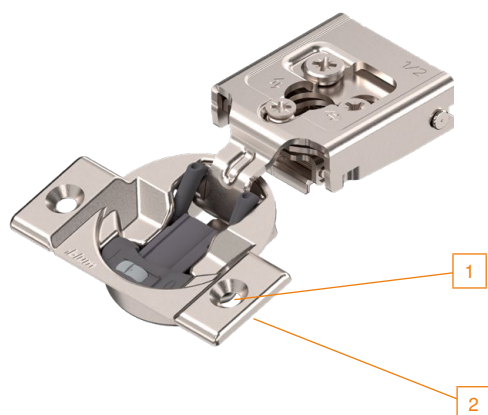


Screw-on

1 No screws

2 No dowels

Part no.
30C255B.08

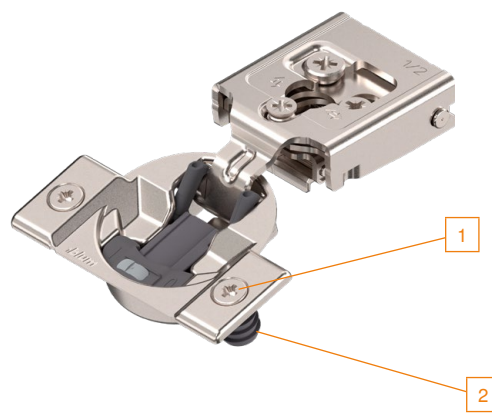


Press-in

1 Dowel screws


2 8 mm dowels

Part no.
30C258B.08

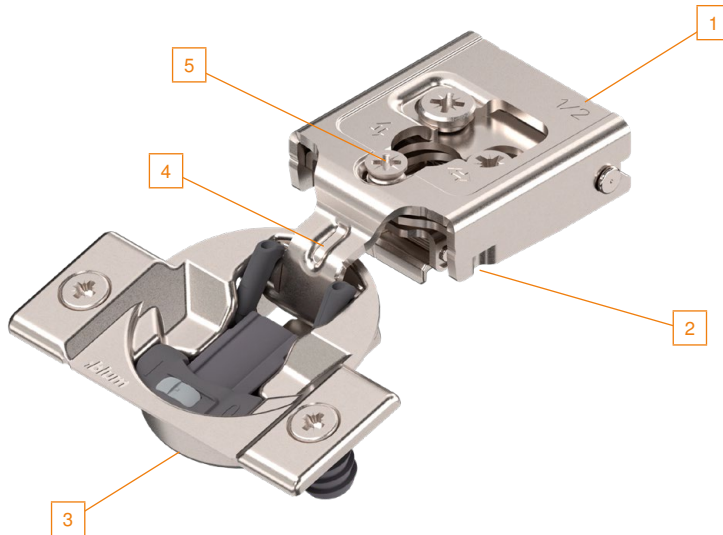**COMPACT CLIP 30C2 105°**

- 1** Overlay
- 2** Slot cutout
- 3** 7/16" cup depth
- 4** Indented arm
- 5** Cam screw side adjustment


Part no.

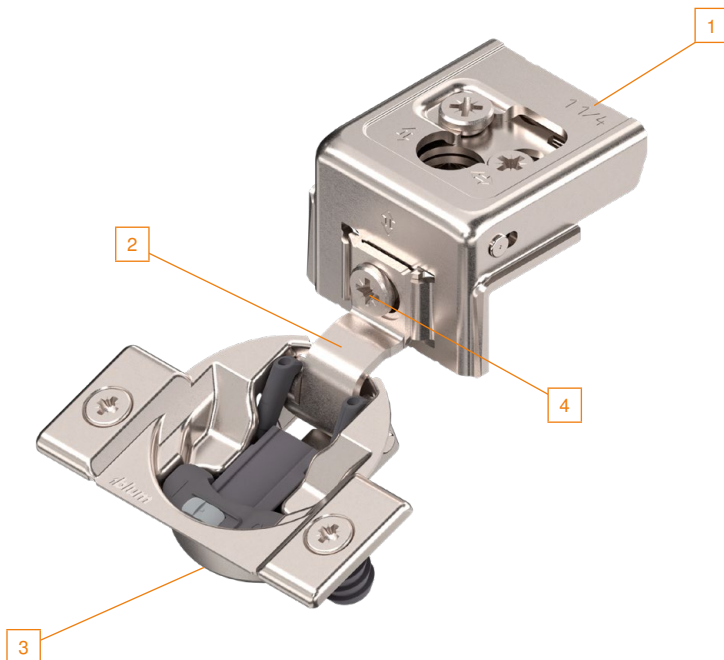30C25XB.08**COMPACT CLIP 31C3 110°**

- 1** Overlay
- 2** Smooth arm
- 3** 1/2" cup depth
- 4** Cam screw side adjustment

Part no.


31C35XB.20

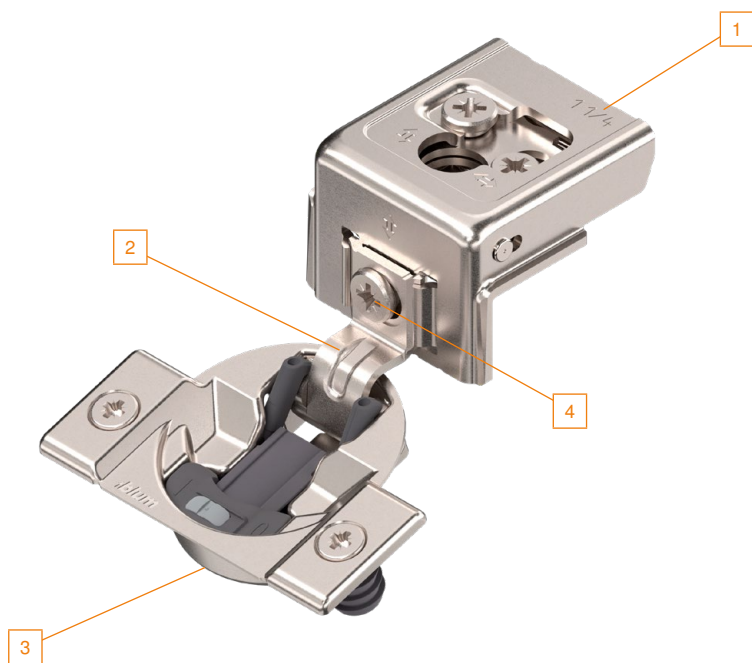**COMPACT CLIP 31C1 107°**

- 1** Overlay
- 2** Indented arm
- 3** 7/16" cup depth
- 4** Cam screw side adjustment


Part no.

31C15XB.20

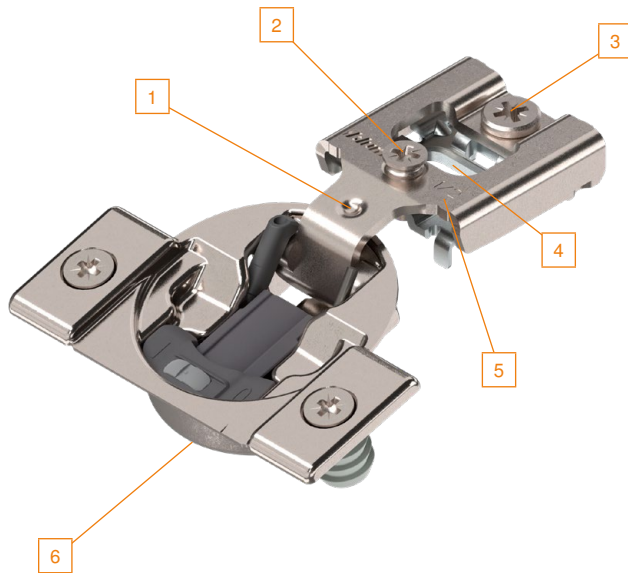**COMPACT BLUMOTION 38N – 105°**

- 1** Dimple in arm
- 2** Cam screw side adjustment
- 3** Cam screw depth adjustment
- 4** Partial overlay plate (1 screw installation)
- 5** Overlay
- 6** 7/16" cup depth


Part no.

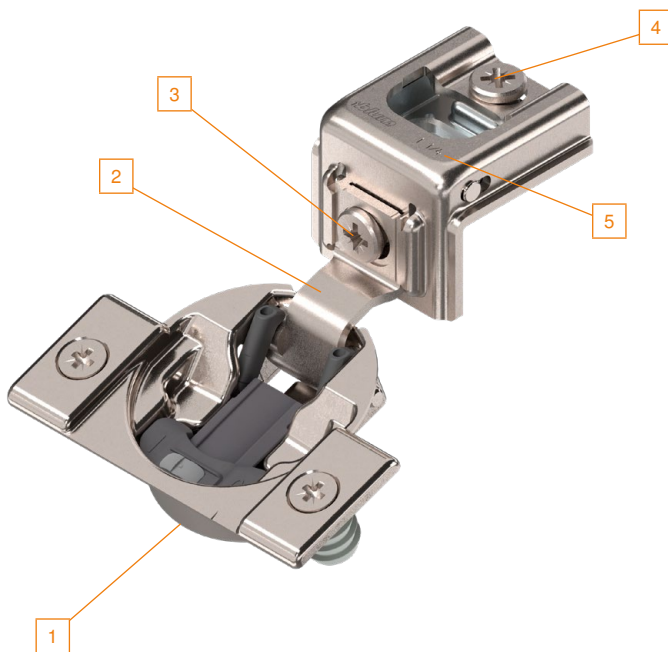38N35XB.XX**COMPACT BLUMOTION 39C – 110°**

- 1** 1/2" cup depth
- 2** Smooth arm
- 3** Cam screw side adjustment
- 4** Cam screw depth adjustment
- 5** Overlay

Part no.

39C35XB.XX

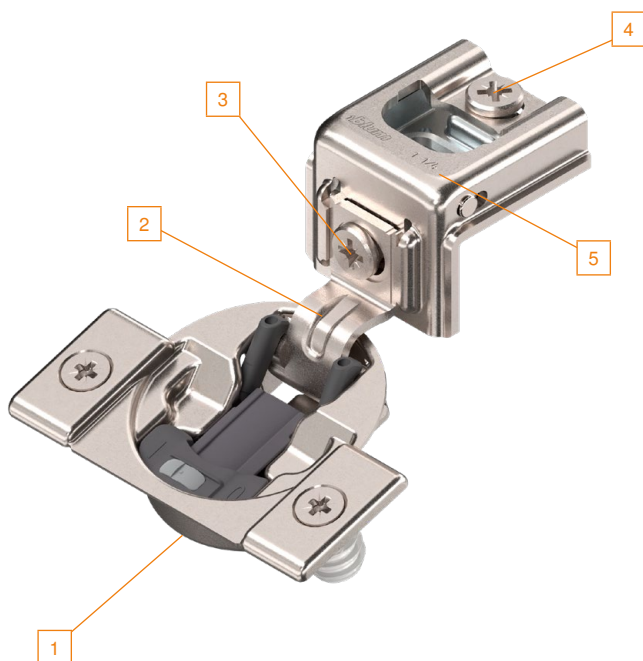


COMPACT BLUMOTION 38C – 107°

- 1 7/16" cup depth
- 2 Indented arm
- 3 Cam screw side adjustment
- 4 Cam screw depth adjustment
- 5 Overlay

Part no.

38C35XB.XX

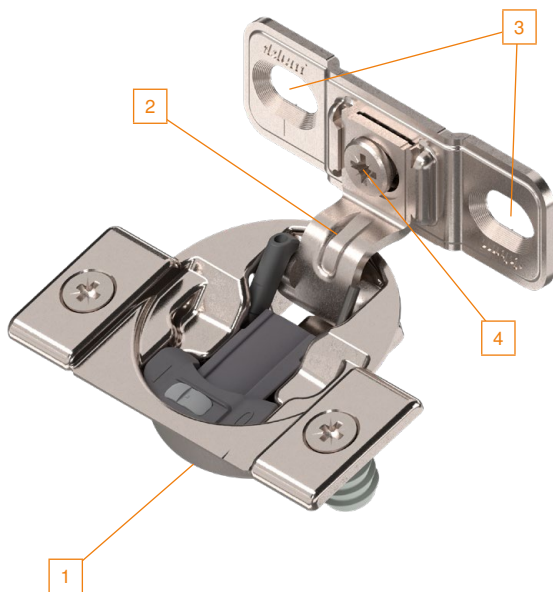


COMPACT BLUMOTION 38B – 107°

- 1 7/16" cup depth
- 2 Indented arm
- 3 Face mount plate (2 screw installation)
- 4 Cam screw side adjustment


Part no.

38B35XBF22

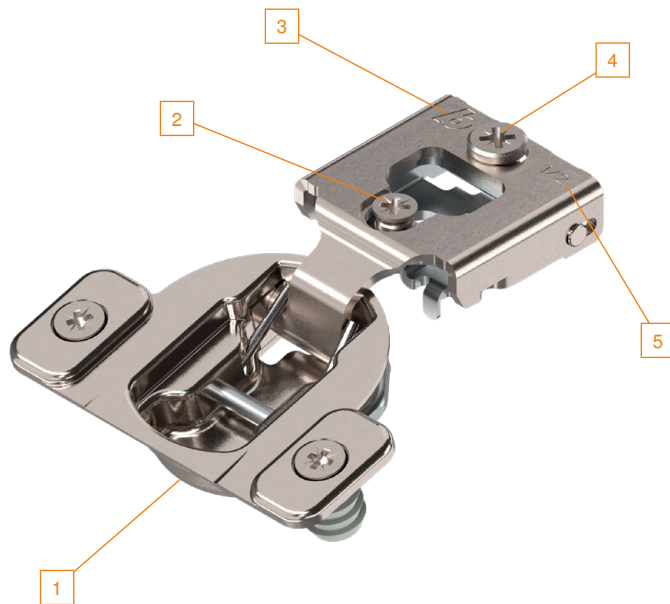**COMPACT 38N – 105°**

- 1** 7/16" cup depth
- 2** Cam screw side adjustment
- 3** "b" logo
- 4** Cam screw depth adjustment
- 5** Overlay


Part no.

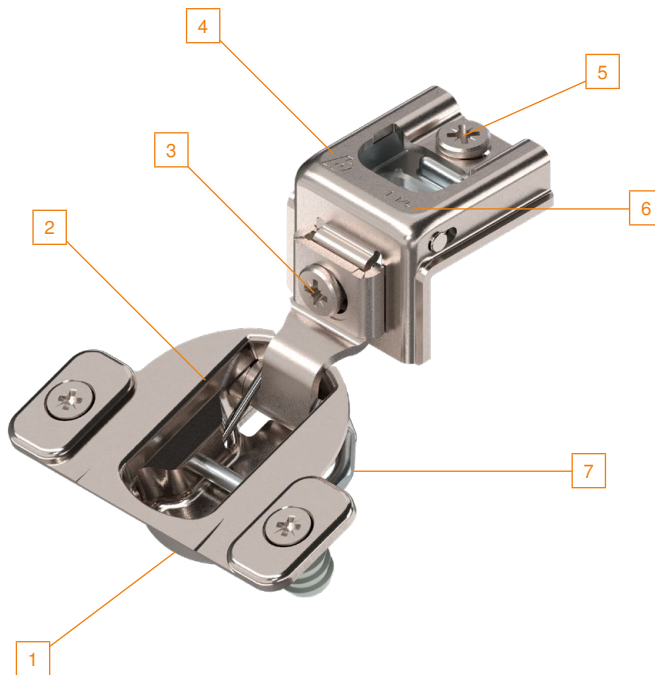38N35XC.XX**COMPACT 39C – 110°**

- 1** 1/2" cup depth
- 2** Square cutout
- 3** Cam screw side adjustment
- 4** "b" logo
- 5** Cam screw depth adjustment
- 6** Overlay
- 7** 39C stamped on base of cup

Part no.

39C35XC.XX

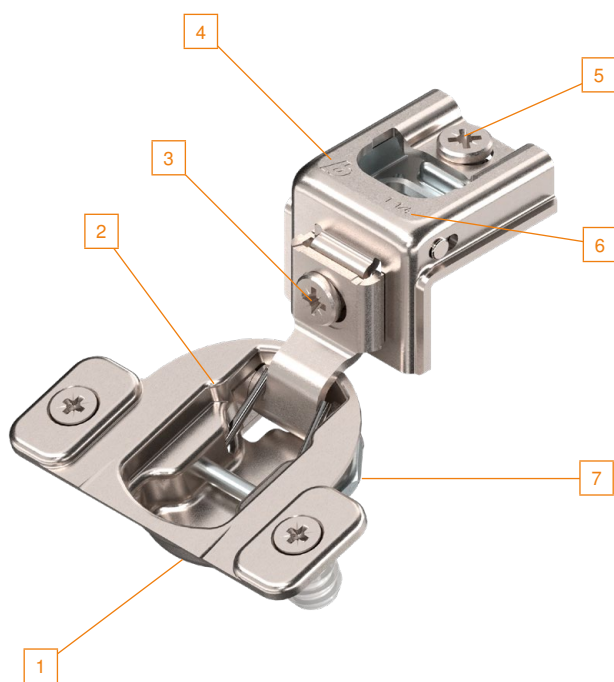



COMPACT 38C – 107°

- 1** 7/16" cup depth
- 2** Cutout with step
- 3** Cam screw side adjustment
- 4** "b" logo
- 5** Cam screw depth adjustment
- 6** Overlay
- 7** 38C stamped on base of cup

Part no.

38C35XC.XX

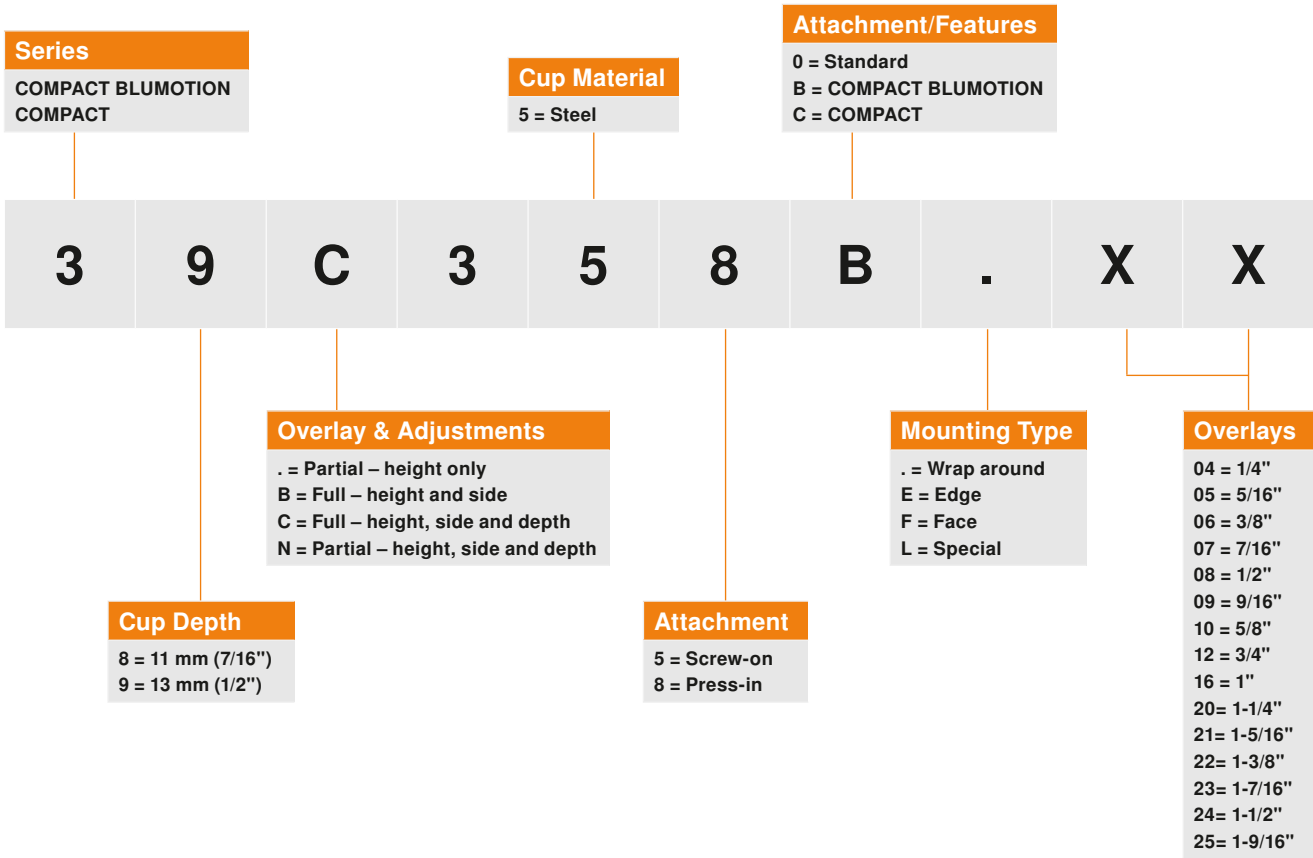

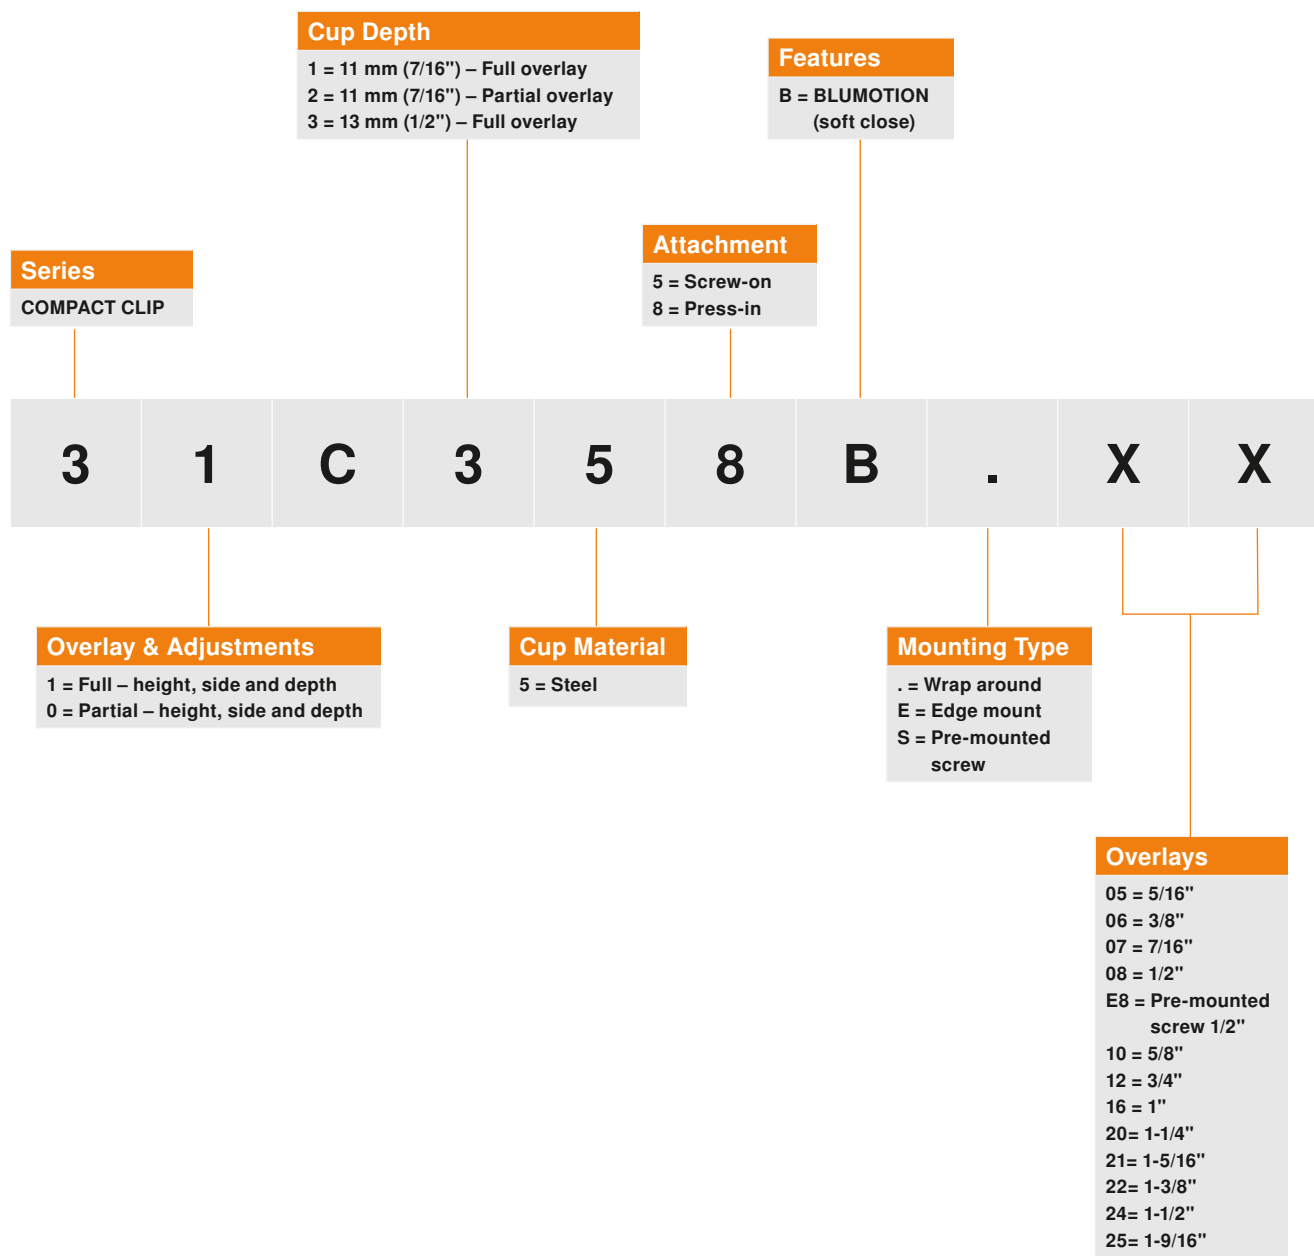



Please visit blum.com for information on other Blum products
LIT.HNG5200.07.25 Ident. 26321870 © 2025 Blum, Inc.

Blum, Inc.
7733 Old Plank Rd.
Stanley, NC 28164
800-438-6788
blum.com

FSC LOGO



ISO 9001
Certified Quality
System

